

TCM_{FX}

Confetti Booster II

Manual



Article : Confetti Booster II
Article Number : TCM 350
Version : 1.0
Date : 17-07-2017

Foreword

Thank you for purchasing the Confetti Booster II.

The Confetti Maker is manufacturer of biodegradable, colorfast and fireproof confetti products and special effects.

The products we manufacture are used for various events, such as concerts, opening ceremonies, sporting events and theater show productions. With our products your party is guaranteed to be a great success.

“We create experiences.”

This manual describes the Confetti Booster II.

All information in this manual is important for the safe and proper functioning of the Confetti Booster II.

Please read the manual carefully if you are not familiar with this device.

The Confetti Maker wishes you lots of fun with your purchase!

© Copyright 2017 the Confetti Maker FX®. This manual and its content is copyright of the Confetti Maker FX®. All rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means including photocopying and recording without the written permission of the copyright holder.

The Confetti Maker Reserves the right to make any changes without direct knowledge of the customer.

Please contact your supplier for additional information regarding maintenance and repair.

This user manual has been written with care and attention to detail; however, should you find any errors or omissions, please contact your supplier and inform them of your findings.

Please be aware that The Confetti Maker FX® shall not be held liable by the user for any damages, losses or third party claims arising from any uses of this product.

General Safety

WARNING!

Read the manual carefully before using the Confetti Booster II.
The Confetti Maker ® is not liable for injury, damage and / or excessive wear resulting from improper maintenance, improper use or modifications to the device.

If you have any questions, issues or problems that do not get discussed in this guide, please tell your supervisor or call/e-mail the technical support from The Confetti Maker®.

The Confetti Booster II and the manual may not be modified without permission of The Confetti Maker®.

In case of damage or problems, always consult The Confetti Maker® as soon as possible.

Introduction

General Info

The Confetti Booster II is pressured with CO₂.
The Confetti Booster II can be used for firing large amounts of Confetti.
Firing anything other than Confetti is not allowed.
The supplier is not responsible for the misuse of this device.

Confetti

The Confetti Booster is developed to shoot Confetti in large locations. The following types of fillings are possible.

Slow fall Paper or Metallic confetti 55 x 17 mm (1 package is 1kg)
Max. 2Kg Paper Confetti
Max. 2Kg Metallic Confetti



Specifications

Measurements	: 147 x 64 x 37 cm
Weight	: 71Kg
Voltage	: 220/230 AC
Power	: 100W
Output	: Confetti
Output Distance	: 20-25m
Warranty	: 3 years

Ideal environmental values

Temperature : 0 – 45 °c

Humidity : max. 75%

Keep away from:


- Dust
- Corrosive gasses
- High concentrations of organic gasses.
- Not situated at a vibration source.

Components

1. Blower
2. Angle Adjuster



3. Input Connection CO2 bottle
4. Output CO2 Blower
5. Powercon In
6. Powercon Out

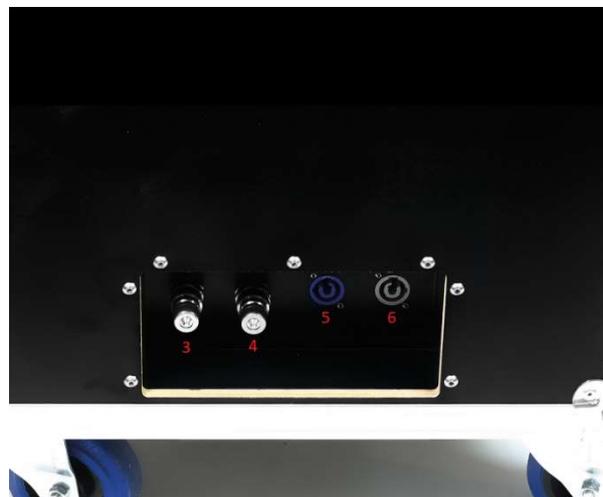

7. Input CO₂ (Connect to Output CO₂ Blower)



8. Adjusting Knob



CO₂

The Confetti Booster II can be connected with different types of gas bottles. With the 22,5kg bottle you can shoot up to 25kg of confetti or 60seconds. With the 37,5kg bottle you can shoot up to 40kg of confetti or 90seconds.

Accessories

The Confetti Booster II is provided with Co₂ through a hose that is connected to a gas cylinder.

The CO₂ hoses are for sale and rent in various lengths.

- 5m
- 10m
- 15m



CO₂ Hose

The CO₂ Hose supplies the Confetti Booster II with CO₂. Connect male plug to the CO₂ gas bottle. Connect the female plug to the CO₂ Jet.



Quick Connector

With the Quick connector a CO₂ hose can easily be connected to a CO₂ bottle. Screw the Black side of the Quick connector on to the CO₂ bottle. Plug the other side of the connector to the male side of the CO₂ hose.



Loop Through Cable

The function of the loop through cable is supplying multiple devices with a single power socket. Looping through the device should only be done without power. The first Confetti Booster II is connected to a power socket with the power socket to Powercon cable. The second Confetti Booster II is powered with the blue Powercon connector on the loop through cable. The grey side of the loop through cable connects to the grey connector on the first Confetti Booster II. Connect the Powercon by plugging the Powercon into the connector on the Confetti Booster II and turning it clockwise until you hear a click sound. Repeat this process for the rest of the Confetti Booster IIs.



Power Socket to Powercon cable

The power socket to Powercon cable is the power cable of the Confetti Booster II. The power socket side connects to 230V 50-60HZ. The power connector connects to the Confetti Booster II. Connect the Powercon by plugging the Powercon into the Confetti Booster II and turning it clockwise until you hear a click sound.



TCM FX-Control

The TCM FX-Control is designed to control multiple TCM products.

Connect the power socket to Powercon cable to the blue connector on the side of the FX Control.

Connect the Confetti Booster II to the FX-Control with the loop through cable.

Connect the blue side of the cable to the Confetti Booster II and the grey side of the cable to the back side of the FX Control.

When firing the Confetti Booster II first switch the key switch to unlock the panel.

Switch the safety switch to the right so the white dot is pointing upwards. When the red fire button is pushed, the Confetti Booster II will activate. Turn the safety switch to the left when the Confetti Booster II is not in use.

To connect multiple FX Control panels use the loop through cable. Connect the Blue side of the Powercon to the second FX-Control. Connect the grey side of the loop through cable to the grey connector on the FX-Control. Both FX-Controllers are now powered.

Warranty

The Confetti Booster II has a 3 year warranty which will be void if the Confetti Booster II is handled differently than described in this manual.

The warranty is void when the Confetti Booster II has been opened by anyone other than the Confetti Maker.

The Confetti Maker is not responsible for any paint or hardware damaged as a result of rough handling.



CAUTION! Always contact your supplier in case of malfunctions.
Never try to repair the Confetti Booster II yourself.



WARNING

READ THIS DOCUMENT BEFORE INSTALLING OR USING THE CONFETTI BOOSTER II

IMPROPER SELECTION, IMPROPER USE, USE BY ANYONE OTHER THAN TRAINED USERS HAVING APPROPRIATE TECHNICAL EXPERTISE OF THE CONFETTI BOOSTER II CAN CAUSE DAMAGE TO EQUIPMENT OR PROPERTY.

This document and other information from the Confetti Booster II, its subsidiaries and authorized distributors together only provide product installation guidelines and product or system usage options, each of which are intended to operate in conjunction with further investigation by trained users having appropriate technical expertise to facilitate the safe handling and use of the Confetti Booster II. The Confetti Booster II is not intended to be used or handled by any users other than trained users having appropriate technical expertise. The information and documentation contained in our catalog and on the website, www.theconfettimaker.com, is only provided for technical illustration purposes only and may not be used or relied upon as a statement of suitability for use in any particular application. Users, through their own analysis and testing, are solely responsible for assuring that the Confetti Booster II is used in a safe and intended manner with all performance, endurance, maintenance, safety and warning requirements necessary for safe application being met.